

 
# Central Wiring Switch Boxes

## Model: Heatmiser UH1



### 12v Network Thermostat Wiring Centre

The UH1 is designed to be used in conjunction with our 12v network thermostats. The UH1 provides central switching and is therefore ideally situated next to the underfloor heating manifold. Eight zones can be controlled as well as providing an output for a hot water cylinder. On demand from any zone, a 230v output is provided to switch the relevant zone actuators, underfloor heating pump and valve. A volt free connection is supplied for the boiler, making it compatible with almost all types of boilers. Up to six actuators can be connected to each zone. An option is provided to turn zone 8 into a radiator zone. In this mode the underfloor heating pump, valve and boiler are not enabled when there is a call for heat from zone 8. The UH1 provides a network port allowing connection to our network products, including the central TouchPad and NetMonitor.

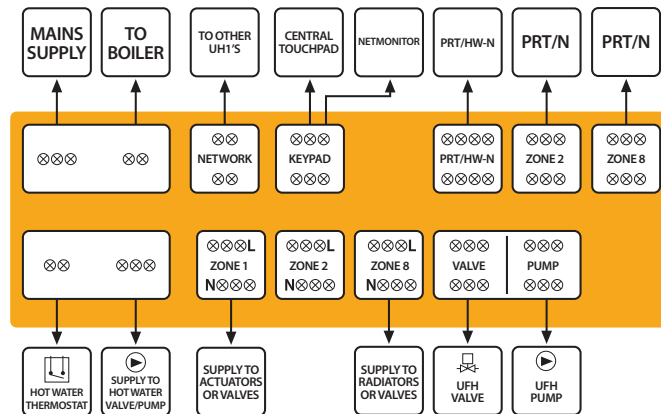


## Model: Heatmiser UH1-W



### Wireless 230v 8 Zone Wiring Centre

 The UH1-W is designed to be used in conjunction with our compatible wireless thermostats. The UH1-W provides central switching and is therefore ideally situated next to the underfloor heating manifold. Eight zones can be controlled as well as providing an output for a hot water cylinder. On demand from any zone, a 230v output is provided to switch the relevant zone actuators, underfloor heating pump and valve. A volt free connection is supplied for the boiler, making it compatible with almost all types of boilers. Up to six actuators can be connected to each zone. An external aerial is available for use when the UH1-W is being mounted in a metal cupboard or when the wireless signal is restricted. A software option in the thermostat allows you to configure which zones are underfloor heating and which zones are radiators.

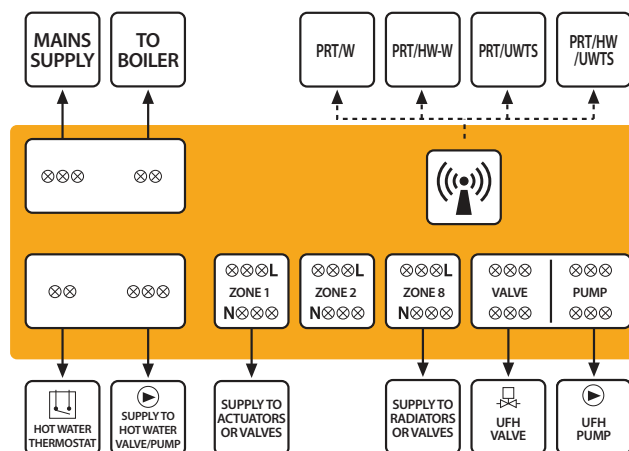

# Central Wiring Switch Boxes

 
## Model: Heatmiser UH2



### 230v 4 Zone Wiring Centre

The UH2 can be used in conjunction with our mains thermostats.

The UH2 provides central switching of up to four zone actuators as well as providing an output for a hot water cylinder and the heating system boiler and pump. When used for underfloor heating, an option is available to use zone 4 for conventional radiator control. Up to six actuators can be connected to each zone.

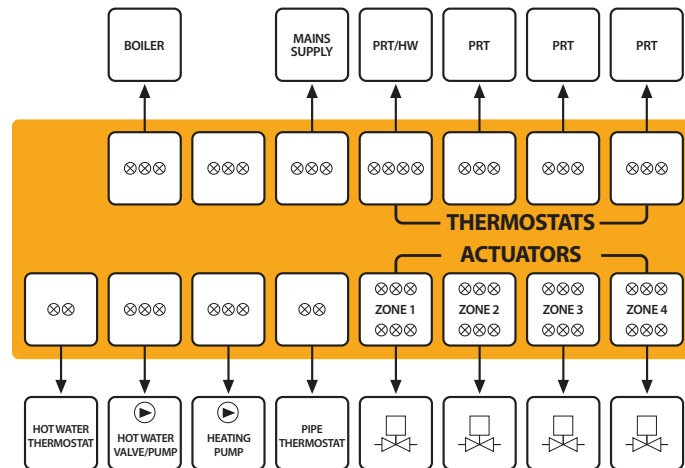

## Model: Heatmiser UH3



### 230v 8 Zone Wiring Centre

The UH3 is designed to work with our four channel 230v time clock (TM4) and 230v Set back thermostat (DS-SB) but equally could be used with any 230v room thermostat. Up to eight zones can be controlled from the UH3. On board the UH3 are two heating time channels, each zone allows you to specify which time channel it should follow. Two additional time channel connections are provided for hot water control or other auxiliary devices. On demand from any zone, a 230v output is provided to switch the relevant zone actuator, underfloor heating pump and valve. A volt free connection is supplied for the boiler, making it compatible with almost all types of boilers. A simple slide switch makes zone 8 suitable for controlling a radiator zone. When used for controlling radiators, zone 8 does not enable the underfloor heating pump, valve and boiler. Up to four actuators can be connected to each zone.

