

# Wireless Series

# Model: Slimline-RF



RF-Switch Compatible	Y	Built In Sensor	Y
RF-Link Compatible	Y	Remote Air Sensing Mode	Y
UH8-RF Compatible	Y	Floor Sensing Mode	N
Temperature Range	05-35 °C   41-95 °F	Remote Probe Included	N
Non-Programmable Mode	Y	Accuracy	+/-1°C
5/2 Day Programming Mode	Y	Adjustable Switching Differential	Y
7 Day Programming Mode	Y	Wireless Fail Safe Function	Y
Number of Heating Levels	4	RF Frequency	868MHz
Optimum Start	Y	Operational Radio Range (Open Space)	Up to 100M
Number of HW Times	4	Power	2 x AAA
Holiday Function	Y	Battery Life Time	Typically 1 Year
Keylock Function	Y	USB Power Lead Included	N
Temperature Hold	Y	Mounting Type	Wall
Temperature Override	Y	Supply	2 x AAA
Frost Protection	Y	<b>Installed Dimensions (L,H,D)</b>	<b>85 x 98 x 24mm</b>
°C / °F Option	Y	<b>Weight</b>	<b>106g</b>

## Feature Table

FEATURE	DESCRIPTION	SETTING	FEATURE	DESCRIPTION	SETTING
01	Temperature Format	00 = °C, 01 = °F (°C = Default)	09	UH8-RF Output Type	Underfloor Heating = 00, 01 = Radiators
02	Switching Differential	01°- 03°C (Default 01°C)	10	Fail Safe	00 = Disabled, 01 = Enabled
03	Frost Mode	00 = Disabled, 01 = Enabled, (01=Default)	11	UP/Down Temperature Limit	00°C - 10°C (00=Default)
04	Frost Protection Temperature	07°- 17°C (Default 12°C)	12	Sensor Selection	00 = Built In Sensor, 01 = Remote Air Sensor
05	Output Delay	00 - 15 Minutes (00=Default)	13	Floor Temperature Limit	Not used on this model
06	Receiver Type	00 = UH8-RF, 01 = RF-Switch	14	Optimum Start	00 - 03 hours (00=Default)
07	Receiver Address	UH8-RF = 01-99, RF-Switch = 01-32	15	Rate Of Change	Minutes to raise by 1°C
08	UH8-RF Zone Number	01-08	16	Program Mode	00 = 5/2 Day, 01 = 7 Day
			17	Device Type	00 = Non-Programmable 01 = Programmable 02 = Programmable with Hot Water

## Product Dimensions (mm) & Wiring Specification

